


# Multi-Zone Operation

Let's Multi Room experience !! ( Activate & Basic Operation )

■ Zone control by Remote controller from Main room


## ⇒ Transform remote control into Zone controller.

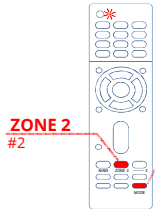

※Normally you can only operate the main room remote control, Become transform it to a remote control to operate the Zone.  
Procedure


- (1) Press simultaneously [MODE] + [ZONE2] 3 or more seconds  
" ● " x2 twice blinks on side of Remote controller power button.

## → Activate Zone function the Unit/AV receiver.

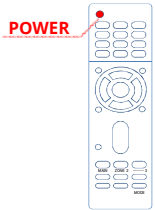

※Initial is disabled.


Procedure

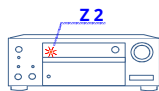

- (1) Transformed Zone2 remote controller point to the Unit
- (2) Press the [POWER]  
Indicate [Z2] on Main unit display.

## → Send to Zone2 same source as Main Zone

Procedure

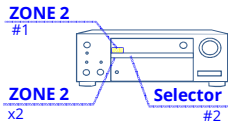

- (1) On the Main unit , press [ZONE2]  
→ within 8 seconds
- (2) Press any selector button want send to Zone2
- (3) Press [ZONE2], [ZONE2] (twice)  
⇒ The above operation was fixed by this operation (send selector)



## → Volume adjustment

Procedure 1 , connecting by Zone2 Preout and use Pre-Main amplifier in Zone2

- (1) Done on the Pre-Main amplifier in Zone2



Procedure 2, connecting by Zone2 Speaker terminal

- By Remote controller
- (1) Adjust Volume button on remote controller.
- By Main unit
- (1) Press [ZONE2] on Main unit

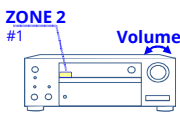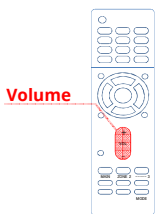

## → Turn Off the Zone2

Procedure

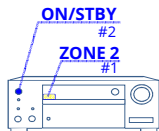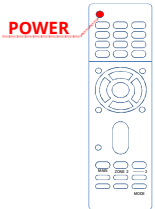


- By Remote controller
- (1) Press [POWER]
- By Main unit
- (1) Press [ZONE2] → [ON/STANDBY]

## → Playing Zone2 only

※Want Zone2 play but Main unit is standby.

Procedure

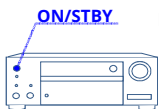

- During playback multi zone
- By Main unit
- (1) Press [ON/STANDBY]

## ⇒ To escape the Zone mode remote controller


※Want control Main zone / unit

Procedure

- (1) Press simultaneously [MODE] + [MAIN] 3 or more seconds  
 " ● " x1 blink on side of Remote controller power button.  
 ⇒ To escape the Zone mode remote controller

### ATTENTION !!

※When the remote control stops working  
 There is a possibility that you are transforming into "Zone mode" unintentionally.  
 Please escape with this procedure.

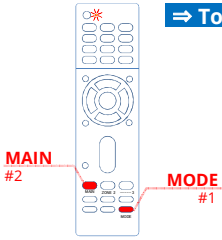


## ■Input / Output List

| Connect  | Format      | Capable | Notes                              |
|----------|-------------|---------|------------------------------------|
| Net      | PCM2ch      | ○       |                                    |
| BT       | MP3         |         |                                    |
| USB      | DSD         | ×       |                                    |
|          | DolbyTrueHD | ×       |                                    |
| HDMI     | PCM2ch      | ○       |                                    |
|          | DD/DTS      | ×       |                                    |
|          | Analog      | ○→      | Add connect RCA Stereo Cable ⇒ P** |
| OPT/COAX | PCM2ch      | ○       |                                    |
|          | DD/DTS      | ×       |                                    |
|          | Analog      | ○→      | Add connect RCA Stereo Cable ⇒ P** |
| Analog   |             | ○       |                                    |

## ■Connection & Operation Example (1)

TX-NR575

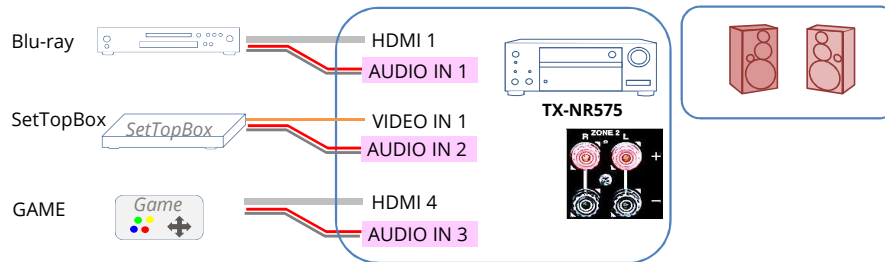


e.g.

MAIN ZONE : Watch the **SetTopBox** Program  
 ZONE 2 : Listen CD by **Blu-ray** player

- (1) AV Receiver turn On
- (2) SetTopBox turn On
- (3) AV Receiver Input selector turn "CBL/SAT"
- (4) Change Zone Remocon [MODE]+[ZONE2] 3 or more second
- (5) Activate Zone function [POWER] by remocon
- (6) Zone Input, MainUnit [ZONE2] (With In 8sec) [BD/DVD]
- (7) Zone2 CD Play Remocon [PLAY]
- (8) If need Main Zone Off, MainUnit [Stby]
- (9) Zone 2 Finish, Remocon [Power], MainUnit [Zone2], [Stby]

■Connection & Operation Example (2)

TX-NR676, -NR777, -RZ620

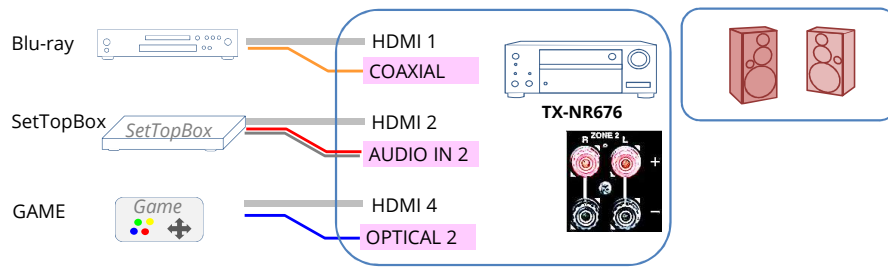


e.g.

MAIN ZONE : Watch the **SetTopBox** Program  
 ZONE 2 : Listen **Net-Service**

- (1) AV Receiver turn On
- (2) SetTopBox turn On
- (3) AV Receiver Input selector turn "NET"
- (4) Change Zone Remocon [MODE]+[ZONE2] 3 or more second
- (5) Activate Zone function [POWER] by remocon
- (6) Zone Input, MainUnit [ZONE2] (With In 8sec) [BD/DVD]
- (7)
- (8) If need Main Zone Off, MainUnit [Stby]
- (9) Zone 2 Finish, Remocon [Power], MainUnit [Zone2], [Stby]

■Connection & Operation Example (3)

TX-RZ720

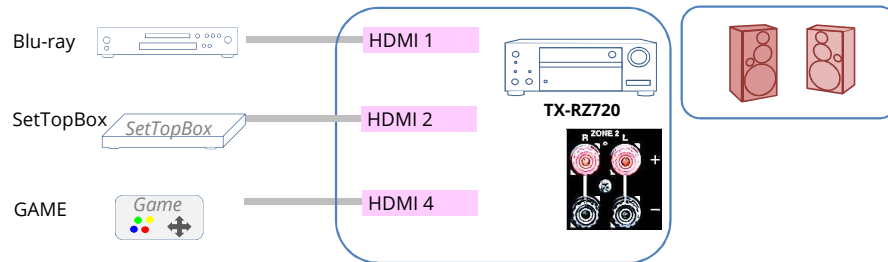

e.g.

MAIN ZONE : Watch Cinema by **Blu-ray**  
 ZONE 2 : Listen **Net-Service**

- (1) AV Receiver turn On
- (2)
- (3) AV Receiver Input selector turn "BD/DVD"
- (4) Change Zone Remocon [MODE]+[ZONE2] 3 or more second
- (5) Activate Zone function [POWER] by remocon
- (6) Zone Input, MainUnit [ZONE2] (With In 8sec) [BD/DVD]
- (7)
- (8) If need Main Zone Off, MainUnit [Stby]
- (9) Zone 2 Finish, Remocon [Power], MainUnit [Zone2], [Stby]